

FORTiS-S™ enclosed encoder system



Contents

1	Legal notices	1	6	Product specification	10
1.1	Copyright	1	7	Installation procedure – extrusion	11
1.2	Trade marks	1	7.1	Protection for sealed linear encoders	11
1.3	Patents	1	7.2	Fitment – general	11
1.4	Disclaimer	1	8	Installation procedure – readhead	12
1.5	Terms and Conditions and Warranty	1	8.1	Measuring length	12
1.6	Product compliance	1	8.2	Start of measuring length	12
1.7	Compliance	1	8.3	Alignment bracket method	12
1.8	Warnings	1	8.3.1	Installation using the alignment bracket method	13
1.9	Further information	1	8.4	Set-up shim method	14
1.10	Packaging	2	8.4.1	Front setting shim procedure	14
1.11	REACH regulation	2	8.4.2	Side setting shim procedure	15
1.12	WEEE recycling guidelines	2	8.5	Installation using the mounting aid method	16
2	Overview of the FORTiS encoder system	3	8.6	FORTiS cable connection	18
3	Parts list	4	8.7	Validating an installation	19
3.1	Included in the box	4	8.8	Air filtration	20
3.2	Not included / required tools	4	9	Electrical connections	21
3.3	Optional extras	5	9.1	Electrical preparation	21
3.3.1	Mounting aid	5	9.2	FORTiS grounding and shielding	21
3.4	Cable options	5	10	Cables and protocols	22
3.4.1	FORTiS connector	5	10.1	General specifications	22
4	Storage and handling	6	10.2	Permissible cable lengths	22
5	Installation drawings	7	10.3	BiSS C serial communications	23
5.1	Mounting surface preparation	7	10.4	FANUC serial communications	24
5.2	Location edge or dowel pins	7	10.5	Panasonic serial communications	24
5.3	Mounting orientations	7	10.6	Siemens DRIVE-CLiQ serial communications	25
5.4	FORTiS system installation drawings	8	10.7	Siemens DRIVE-CLiQ interface	25
5.5	Mounting holes positions table	9			

1 Legal notices

1.1 Copyright

© 2018–2021 Renishaw plc. All rights reserved.

This document may not be copied or reproduced in whole or in part, or transferred to any other media or language by any means, without the prior written permission of Renishaw.

1.2 Trade marks

RENISHAW® and the probe symbol are registered trade marks of Renishaw plc. Renishaw product names, designations and the mark 'apply innovation' are trade marks of Renishaw plc or its subsidiaries. BiSS® is a registered trade mark of iC-Haus GmbH.

Other brand, product or company names are trade marks of their respective owners.

1.3 Patents

Features of Renishaw's encoder systems and similar products are the subjects of the following patents and patent applications:

CN1260551	US7499827	JP4008356	GB2395005	US20100163536
US20150225858	CN102197282	EP2350570	JP5480284	US8505210
KR1630471	CN102388295	EP2417423	KR1701535	US2012007980
CN102460077	EP2438402	US20120072169	KR1851015	JP6074392
JP5755223	EP01103791	US6465773		

1.4 Disclaimer

WHILE CONSIDERABLE EFFORT WAS MADE TO VERIFY THE ACCURACY OF THIS DOCUMENT AT PUBLICATION, ALL WARRANTIES, CONDITIONS, REPRESENTATIONS AND LIABILITY, HOWSOEVER ARISING, ARE EXCLUDED TO THE EXTENT PERMITTED BY LAW.

RENISHAW RESERVES THE RIGHT TO MAKE CHANGES TO THIS DOCUMENT AND TO THE EQUIPMENT, AND/OR SOFTWARE AND THE SPECIFICATION DESCRIBED HEREIN WITHOUT OBLIGATION TO PROVIDE NOTICE OF SUCH CHANGES.

1.5 Terms and Conditions and Warranty

Unless you and Renishaw have agreed and signed a separate written agreement, the equipment and/or software are sold subject to the Renishaw Standard Terms and Conditions supplied with such equipment and/or software, or available on request from your local Renishaw office.

Renishaw warrants its equipment and software for a limited period (as set out in the Standard Terms and Conditions), provided that they are installed and used exactly as defined in associated Renishaw documentation. You should consult these Standard Terms and Conditions to find out the full details of your warranty.

Equipment and/or software purchased by you from a third-party supplier is subject to separate terms and conditions supplied with such equipment and/or software. You should contact your third-party supplier for details.

1.6 Product compliance

Renishaw plc declares that the FORTiS™ enclosed encoder system complies with the applicable standards and regulations. A copy of the EU declaration of conformity is available from our website at www.renishaw.com/productcompliance

1.7 Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The user is cautioned that any changes or modifications not expressly approved by Renishaw plc or authorised representative could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to ensure compliance.

1.8 Warnings

In all applications involving the use of machine tools, eye protection is recommended.

1.9 Further information

Further information relating to the FORTiS encoder range can be found in the FORTiS data sheets available from your local Renishaw representative. See also: www.renishaw.com

1.10 Packaging

The packaging of our products contains the following materials and can be recycled.

Packaging component	Material	ISO 11469	Description
Outer box*	Cardboard	Not applicable	Recyclable
	Polypropylene	PP	Recyclable
Inserts	Low density polyethylene foam	LDPE	Recyclable
	Cardboard	Not applicable	Recyclable
Bags	High density polyethylene bag	HDPE	Recyclable
	Metalised polyethylene	PE	Recyclable

*For some system lengths the packaging material will be wood.

1.11 REACH regulation

Information required by Article 33(1) of Regulation (EC) No. 1907/2006 ("REACH") relating to products containing substances of very high concern (SVHCs) is available at www.renishaw.com/REACH

1.12 WEEE recycling guidelines



The use of this symbol on Renishaw products and/or accompanying documentation indicates that the product should not be mixed with general household waste upon disposal. It is the responsibility of the end user to dispose of this product at a designated collection point for waste electrical and electronic equipment (WEEE) to enable reuse or recycling. Correct disposal of this product will help to save valuable resources and prevent potential negative effects on the environment. For more information, please contact your local waste disposal service or Renishaw distributor.

2 Overview of the FORTiS encoder system

This system is an enclosed linear optical encoder designed for use in harsh industrial environments where high-precision feedback and metrology are required. Based upon Renishaw's award-winning absolute technology, the rugged non-contact design has no internal moving parts, such as bearings or wheeled readhead carriages, thus improving the overall reliability. Additionally, hysteresis and backlash errors associated with mechanical contact system designs are reduced.

In addition to enhanced breakage resistance, the robust steel scale has a coefficient of thermal expansion similar to the base material used in the majority of machines, reducing errors due to thermal effects whilst increasing measurement certainty.

Renishaw's patented set-up LED provides instant verification of the encoder's signal strength and therefore its accurate alignment. This intuitive procedure eliminates the need for additional peripheral diagnostics equipment during installation. When combined with Renishaw's carefully designed installation accessories, these unique tools make installation easier and faster compared to traditional methods, whilst building confidence in a right-first-time installation.

3 Parts list

3.1 Included in the box

	Item	Description
	FORTiS encoder unit	The FORTiS enclosed encoder system
	37 mm readhead setting shim	Plastic shim to be used as an installation aid
	Air connection fitting	To enable connection to one of the encoder air purge inlets
	Cable connection wrench	Used for securely connecting the encoder cable to the readhead
	Alignment brackets	2 × brackets secure the readhead during transit, and set the correct readhead alignment during installation. IMPORTANT: Retain until installation is complete.
	FORTiS quality inspection certificate	Certifies specific encoder performance and provides traceability

3.2 Not included / required tools

	Item	Description
	5 mm torque wrench	To tighten extrusion and readhead mounting screws
	1.5 mm hex key	Air bung removal (only if air purge is required)
	5 mm hex key	For securing of readhead
	4 mm hex key	For locking of mounting aid
	M6 screws	2 × M6 × 1.0 screws length ≥ 35 mm for mounting readhead M6 × 1.0 screws length ≥ 20 mm for mounting extrusion to machine bed (see table in section 5.5 on page 9 for required quantity)

3.3 Optional extras

3.3.1 Mounting aid (part number A-9768-3580)

Optional installation aid to assist with mounting the readhead to a machine slideway that has more than one degree of freedom (see section 8.5 on page 16).



3.4 Cable options (cables not included)

	Item	Description
	Encoder cable type A	OD: 4.7 mm, 28 AWG, 7 core, single screen, black jacket Length options: 0.5 m, 1 m, 3 m, 6 m, 9 m
	Encoder cable type B	OD: 6.3 mm, 23 AWG, 6 core (3 × twisted pairs), single screen, green jacket Length options: 0.5 m, 1 m, 3 m, 6 m, 9 m
	Encoder cable type D	Armoured: OD 10 mm, 28 AWG, 7 core Length options: 1 m, 3 m, 6 m, 9 m
	Extension cable type B	OD: 6.3 mm, 23 AWG, 6 core (3 × twisted pairs), single screen, green jacket Length options: 1 m, 3 m, 6 m, 9 m, 15 m, 20 m
	Extension cable type C	OD: 7.8 mm, 20 AWG (power), 8 core (3 × twisted pairs + 2 power sense), single screen, green jacket Unterminated lengths available up to 100 m

3.4.1 FORTiS connector

All encoder cables include a custom FORTiS connector that connects to the readhead. The connector is covered with a protective cap with an integrated clip; this clip can be used to assist with cable routing.



4 Storage and handling

IMPORTANT: Handle carefully to avoid damage to the location faces when unpacking and installing.

Storage temperature

-20 °C to +70 °C



Operating temperature



0 °C to +50 °C



95% relative humidity (non-condensing)
to IEC 60068-2-78



Handling instructions

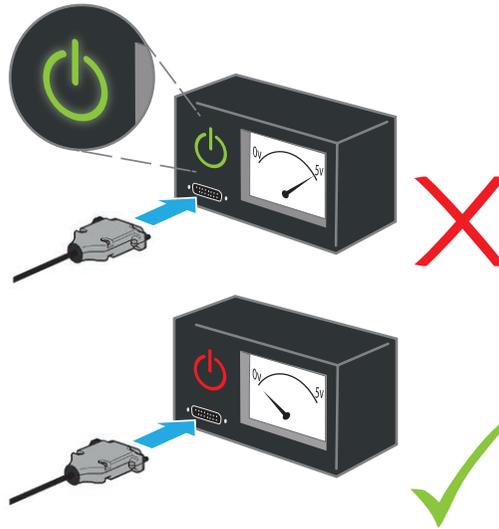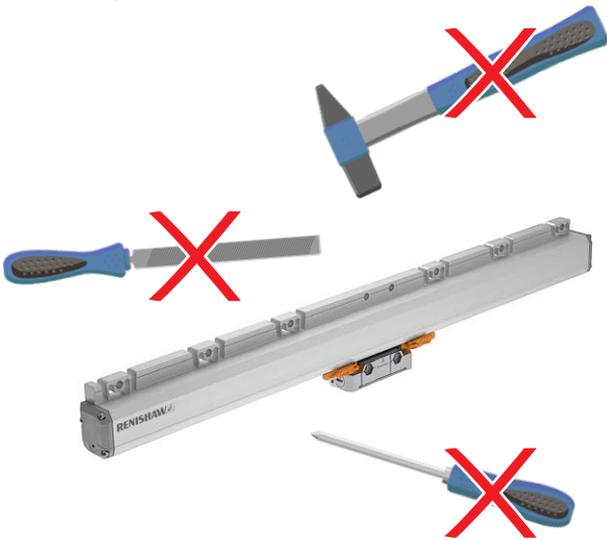


5 Installation drawings

5.1 Mounting surface preparation


To ensure correct operation, the mounting surface should be prepared as follows:

- surface flatness requirement of 0.05 mm/m
- surface should be free of paint and burrs
- refer to installation drawing for required mounting hole positions.


To further simplify and help reduce installation time, it is recommended that the machine axis to which the encoder is to be mounted is prepared with a datum edge or aligned dowel pins to help locate the edge of the extrusion and ensure parallelism to the axis of motion.

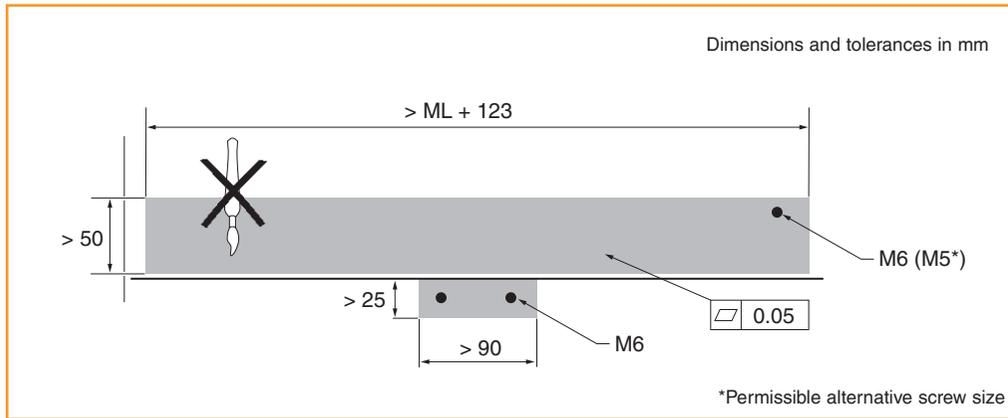

5.2 Location edge or dowel pins

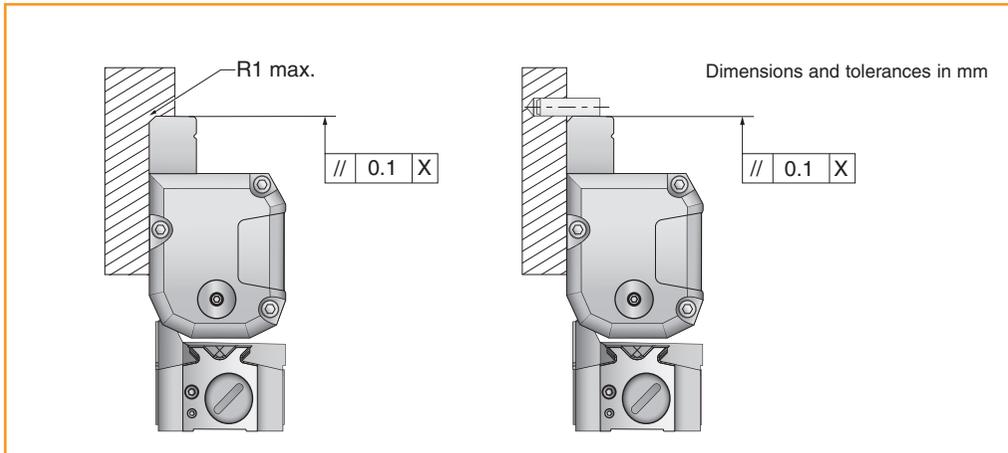

5.3 Mounting orientations

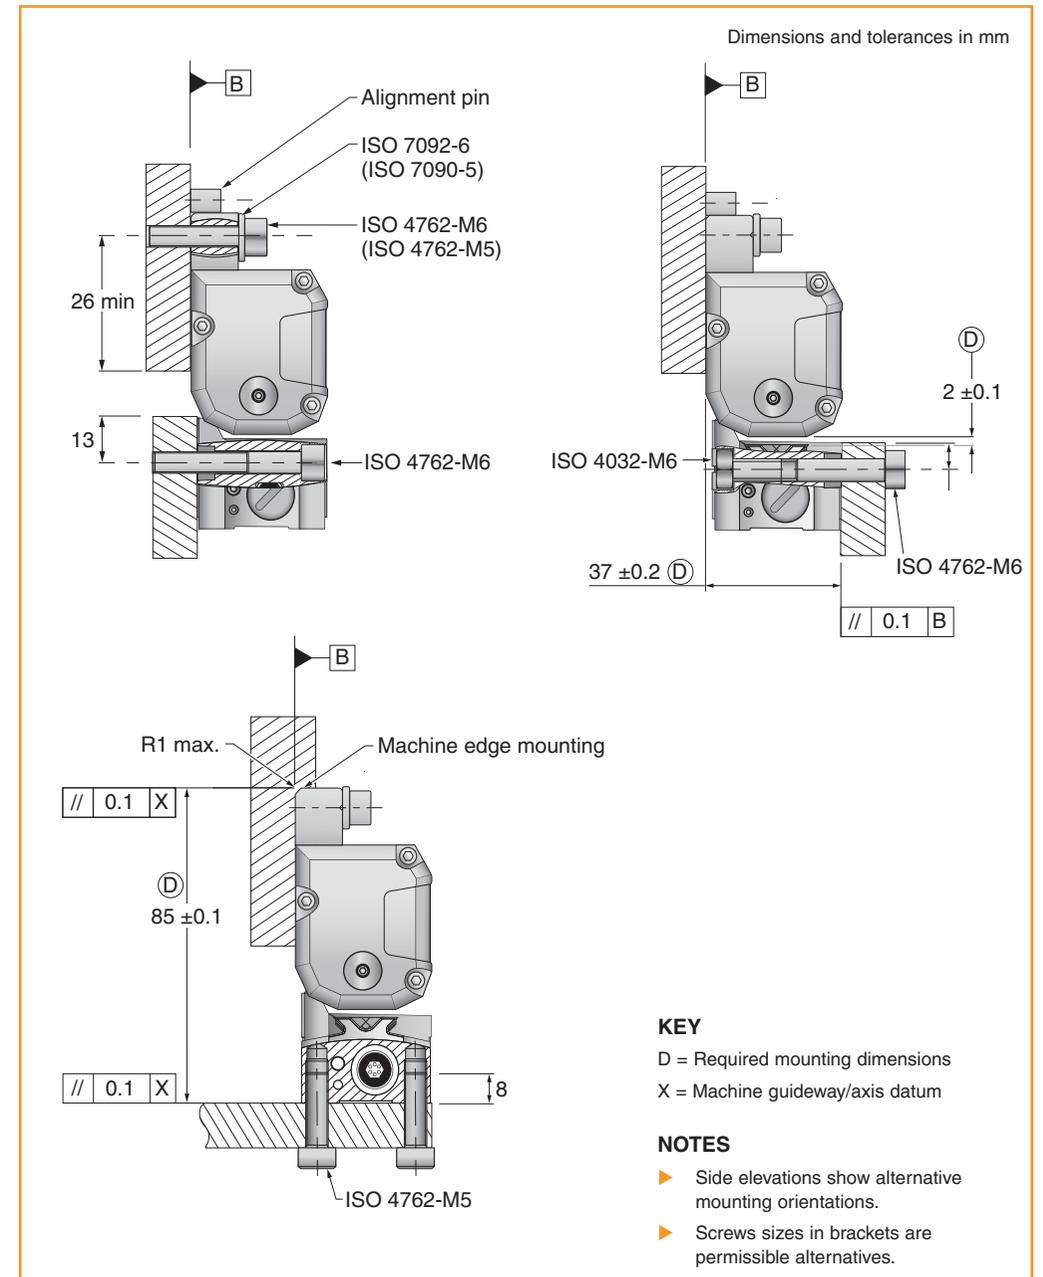

5.5 Mounting holes positions table

Measuring length	Overall length	Recommended thermal datum	Non-preferred thermal datum *		Flexure holes, H every 100 mm			
		Static hole H1	Static hole H2	Static hole H3	First flexure hole	Missing flexure hole	Last flexure hole	QTY of flexure holes
140	263	136	171	-	36	136	236	2
240	363	186	221	236	36	236	336	3
340	463	236	271	-	36	236	436	4
440 (shown)	563	286	321	336	36	336	536	5
540	663	336	371	-	36	336	636	6
640	763	386	421	436	36	436	736	7
740	863	436	471	-	36	436	836	8
840	963	486	521	536	36	536	936	9
940	1063	536	571	-	36	536	1036	10
1040	1163	586	621	636	36	636	1136	11
1140	1263	636	671	-	36	636	1236	12
1240	1363	686	721	736	36	736	1136	13
1340	1463	736	771	-	36	736	1436	14
1440	1563	786	821	836	36	836	1563	15
1540	1663	836	871	-	36	836	1636	16
1640	1763	886	921	936	36	936	1736	17
1740	1863	936	971	-	36	936	1836	18
1840	1963	986	1021	1036	36	1036	1936	19
2040	2163	1086	1121	1136	36	1136	2136	21
2240	2363	1186	1221	1236	36	1236	2336	23
2440	2563	1286	1321	1336	36	1336	2536	25
2640	2763	1386	1421	1436	36	1436	2736	27
2840	2963	1486	1521	1536	36	1536	2936	29
3040	3163	1586	1621	1636	36	1636	3136	31

*The non-preferred thermal datum holes are only included to provide bolt-hole compatibility with old, obsolete encoders. New machines should be designed to use the recommended thermal datum only.

6 Product specification

Measuring standard	Renishaw stainless-steel scale with single track absolute encoding
Coefficient of thermal expansion (at 20 °C)	10.1 ±0.2 µm/m/°C
Thermal datum	At centre position (encoder position of 0.5 × measuring length)
Measuring lengths available (mm)	140, 240, 340, 440, 540, 640, 740, 840, 940, 1040, 1140, 1240, 1340, 1440, 1540, 1640, 1740, 1840, 2040, 2240, 2440, 2640, 2840, 3040
Accuracy grades	High grade: ±3 µm Standard grade: ±5 µm
Resolution	1 nm, 1.25 nm (FANUC only), 10 nm, 12.5 nm (FANUC only), 50 nm
Absolute position protocols	BiSS C, Siemens DRIVE-CLiQ (with external interface), FANUC ($\alpha/\alpha i$), Panasonic, Mitsubishi
Encoder electrical connection	Cable connector M12 custom (customer configurable exit direction)
Controller electrical connection	8-way M12, FANUC 20-way, 10-way Mitsubishi, 17-way M23, 9-way D-Type, 14-way LEMO, flying lead
Cable length	Up to 100 m (with extension cable)
Power supply	5 V ±10% 1.25 W maximum (250 mA @ 5 V) NOTE: Current consumption figures refer to terminated FORTiS systems. Renishaw encoder systems must be powered from a 5 Vdc supply complying with the requirements for SELV of standard IEC 60950-1. Ripple 200 mVpp maximum @ frequency up to 500 kHz

Set-up LED	Signal strength indicator LED colour: Excellent: BLUE Good: GREEN Satisfactory: ORANGE Poor: RED No signal: Flashing RED
Maximum speed	4 m/s
Acceleration (readhead relative to scale)	< 200 m/s ² in measuring direction
Moving force (maximum force required to move the readhead through the seals)	< 5 N
Vibration (55 Hz to 2000 Hz)	Housing: < 300 m/s ² to IEC 60068-2-6 Readhead: < 300 m/s ² to IEC 60068-2-6
Shock 11 ms half-sine	< 300 m/s ² IEC 60068-2-27
Operating temperature	0 °C to 50 °C
Environment protection	IP53 when installed correctly, IP64 with air purge
Air purge requirements	Air supply pressure = 1 bar at encoder At correct supply pressure the supplied air connection fitting restricts the air flow rate to 2 l/min Air quality: see section 8.8 on page 20 for details
Weight	0.27 kg + 2.0 kg/m

IMPORTANT: Specifications are subject to the correct installation procedures as set out in this installation guide. If in doubt, contact your local Renishaw representative.

7 Installation procedure – extrusion

7.1 Protection for sealed linear encoders

IP53 requires installation with sealing lips positioned away from splash water in accordance with EN 60529/IEC 60529.


For ingress protection to IP64, please see [section 8.8 on page 20](#).

7.2 Fitment – general

Please note that fitment of the extrusion is independent of readhead mounting. For illustrative purposes dowel pins are displayed, but the procedure for a datum edge is identical. Where neither an edge or dowel pins are available, begin by aligning extrusion mounting holes.*


Ensure the mounting faces are clean before installation.

**If a suitable reference edge or dowel pins are not available then we recommend that the extrusion is checked against a dial gauge to ensure parallelism to the machine axis.*

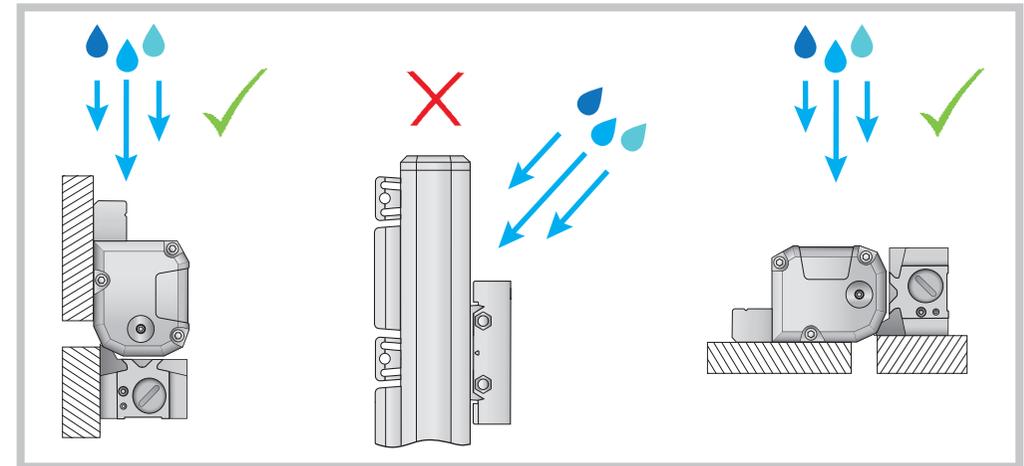


Place the encoder on the mounting surface and firmly push against mounting edge/dowel pins. Position the encoder to align mounting holes.

See [page 7](#), [section 5.2](#) and [section 5.3](#).

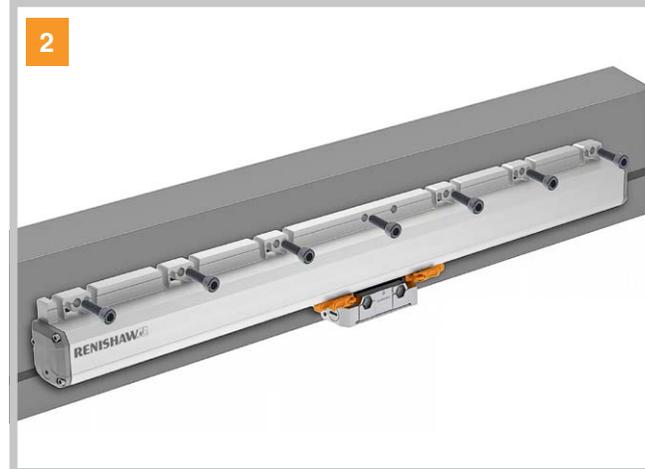

Loosely secure the extrusion to the mounting surface using M6 screws and washers as specified in [section 5.3 on page 7](#).

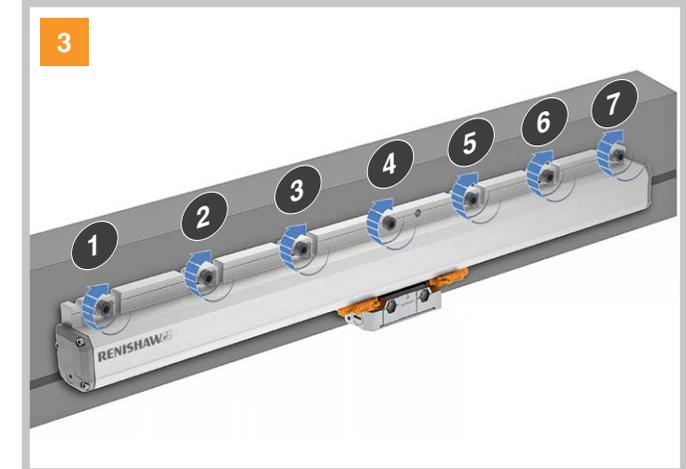

Using the correct tool, tighten the screws to a torque of 8 Nm. Tighten all bolts, working from left to right. (The numbers on the illustration show the order of tightening.)

8 Installation procedure – readhead


Three different methods may be used to install the readhead, making installation easier for a wide range of machine types and mounting surfaces. These are outlined in the following sections.

Please note, installation of the extrusion follows the procedure outlined in [section 7 on page 11](#) and is independent of the readhead installation method being used.

8.1 Measuring length

The start of the measuring length (ML) is indicated by the triangular marking on the extrusion; a corresponding arrow on the readhead should be aligned to this arrow to ensure the readhead is within the encoder measuring length.

8.2 Start of measuring length

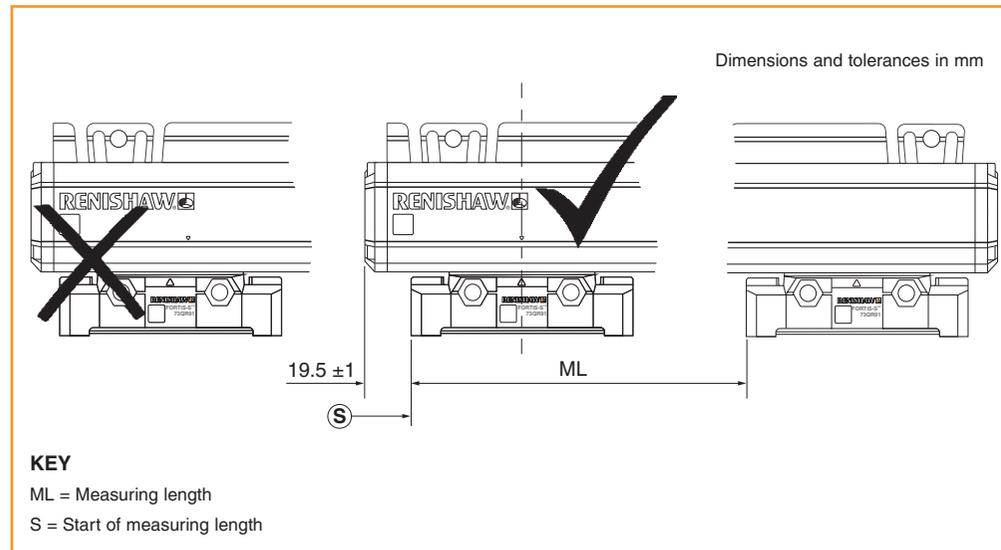


WARNING: Failure to ensure the readhead is within the measuring length of the encoder could lead to a collision and damage.

8.3 Alignment bracket method





Pre-fitted alignment brackets help protect and secure the readhead to the extrusion during transit. These alignment brackets can also be used to set the readhead at the nominal installation rideheight.

The alignment brackets have three different operating positions which are detailed in the table below.

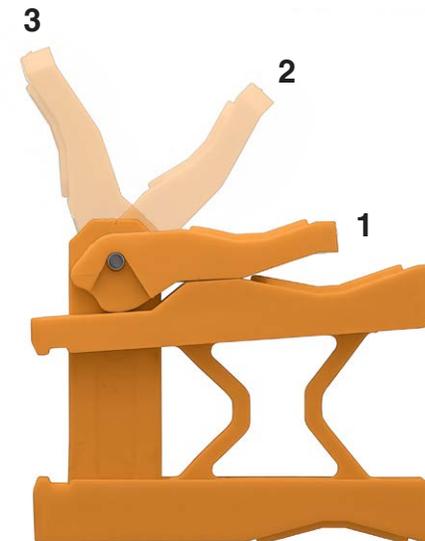

Position	Status	Description
1	Closed	Alignment bracket locks the readhead to the extrusion for transit
2	Semi-open	Readhead can be moved along the extrusion for alignment purposes, whilst maintaining optimum rideheight
3	Open	Alignment bracket can be removed from the extrusion after installation

8.3.1 Installation using the alignment bracket method

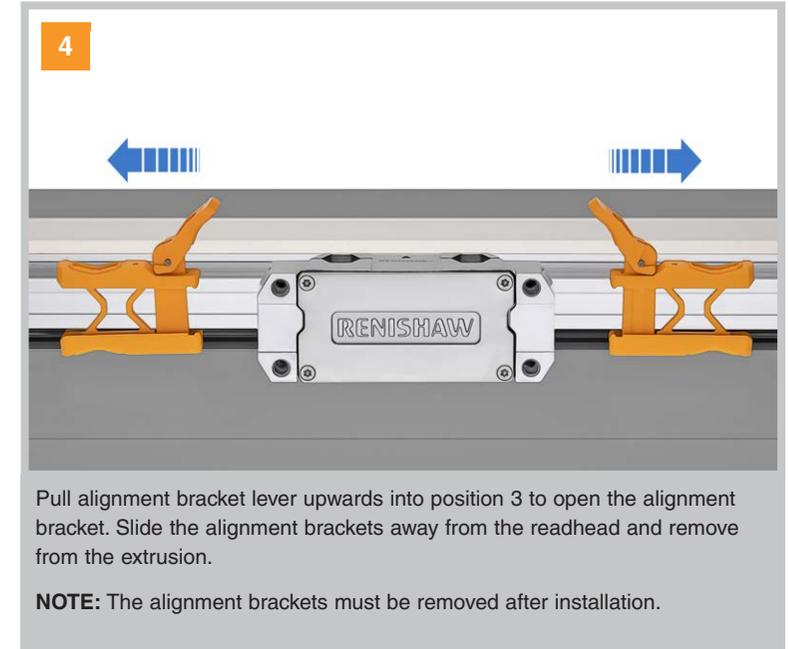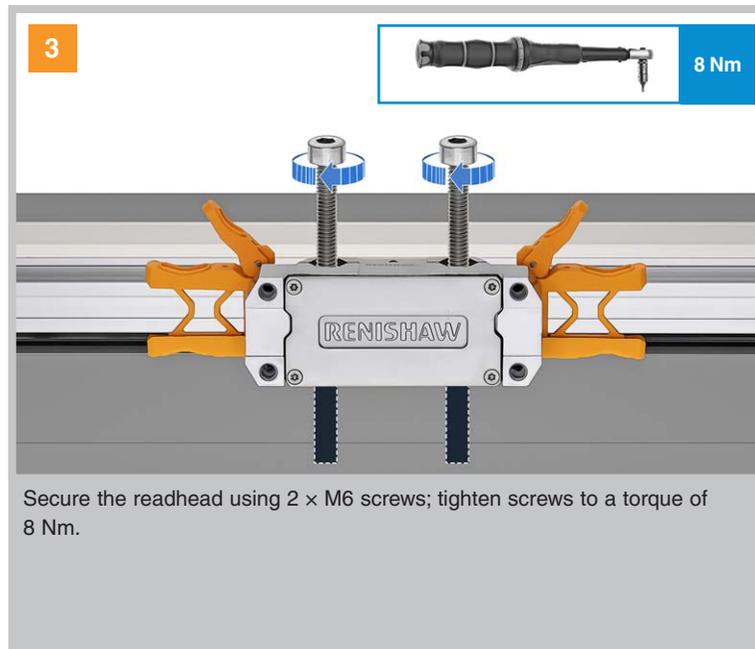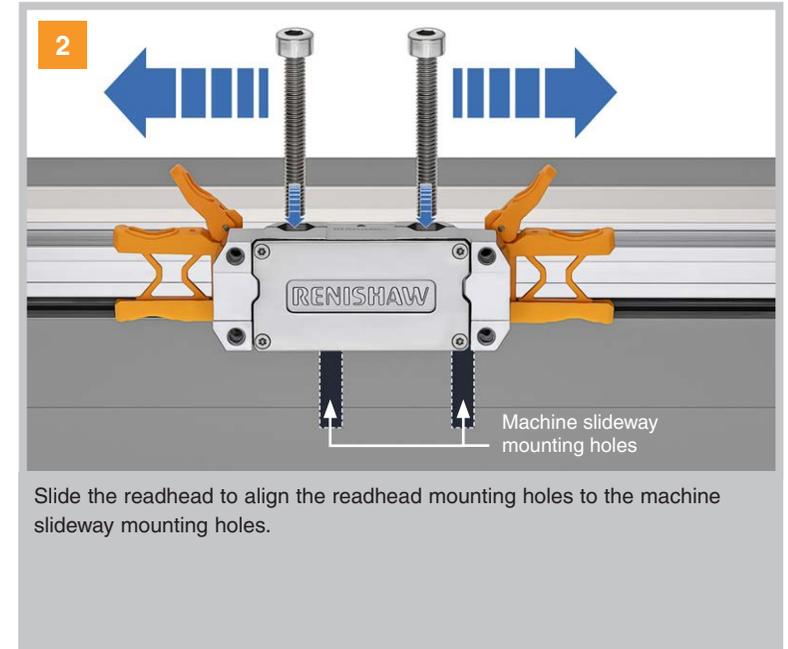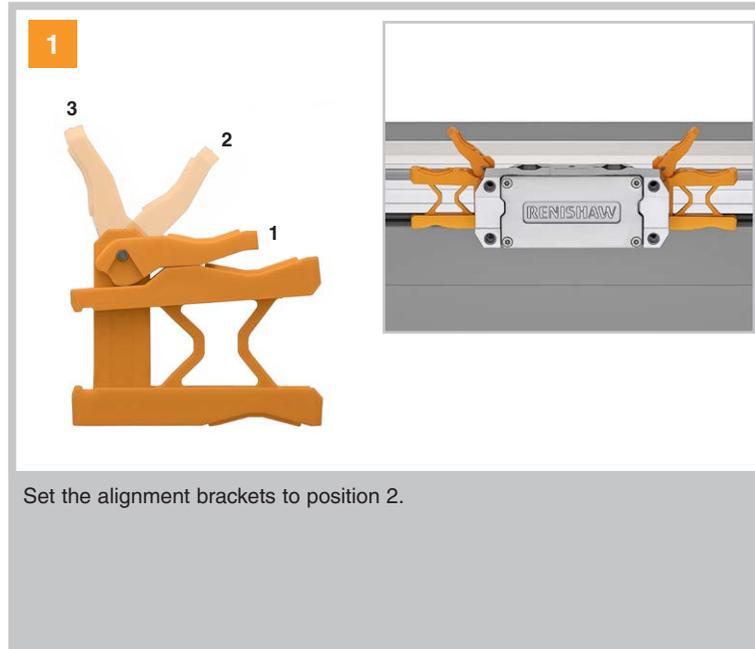


8.4 Set-up shim method

When using this method, remove the alignment brackets (see section 8.3.1 on page 13) just prior to installation.


Where access to the readhead from either side is restricted in the installation position, a setting shim can be used instead of the alignment brackets to ensure correct positioning of the readhead relative to the extrusion. The shim is easily inserted between the readhead and encoder extrusion.

8.4.1 Front setting shim procedure

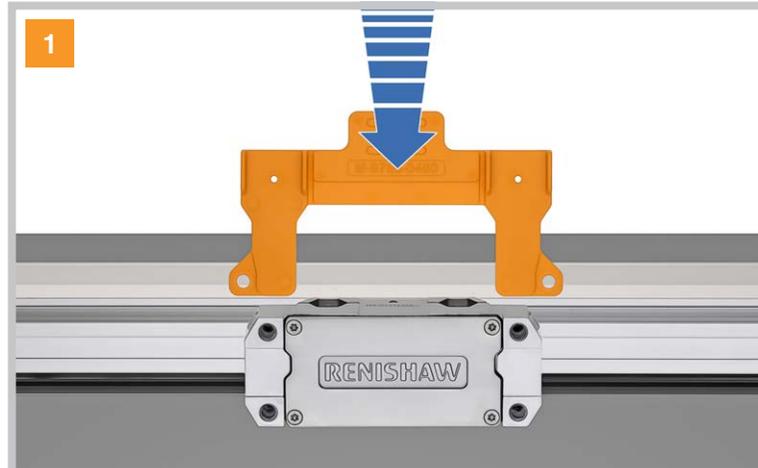

Place setting shim between the readhead and the extrusion.




Push the readhead lightly against the shim to set rideheight and align the readhead mounting holes.

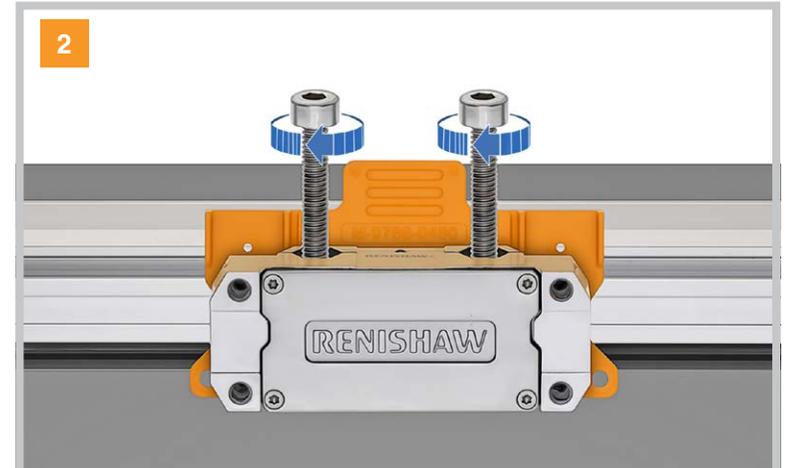

Whilst maintaining light pressure on the readhead, secure the readhead with 2 × M6 screws. Tighten screws to 8 Nm to complete the installation.

Remove the setting shim.

8.4.2 Side setting shim procedure


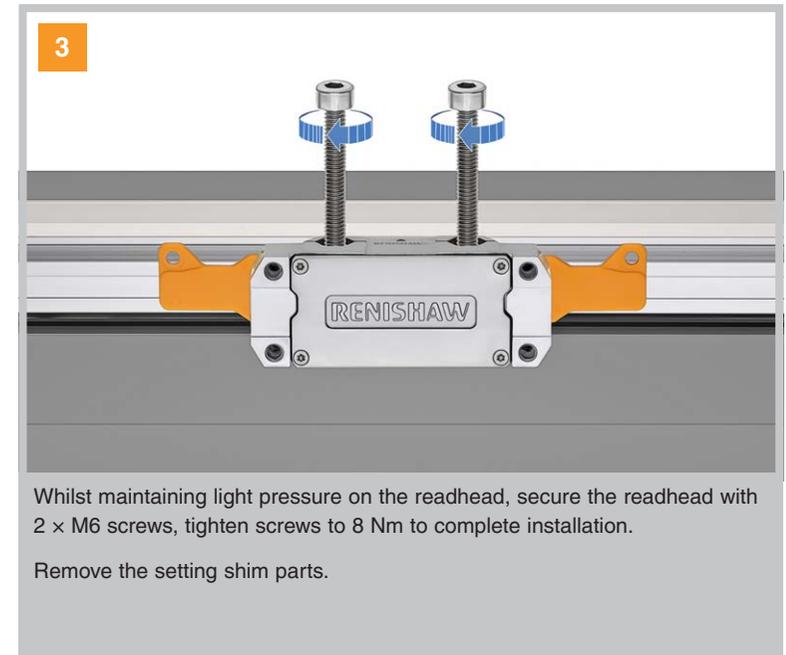
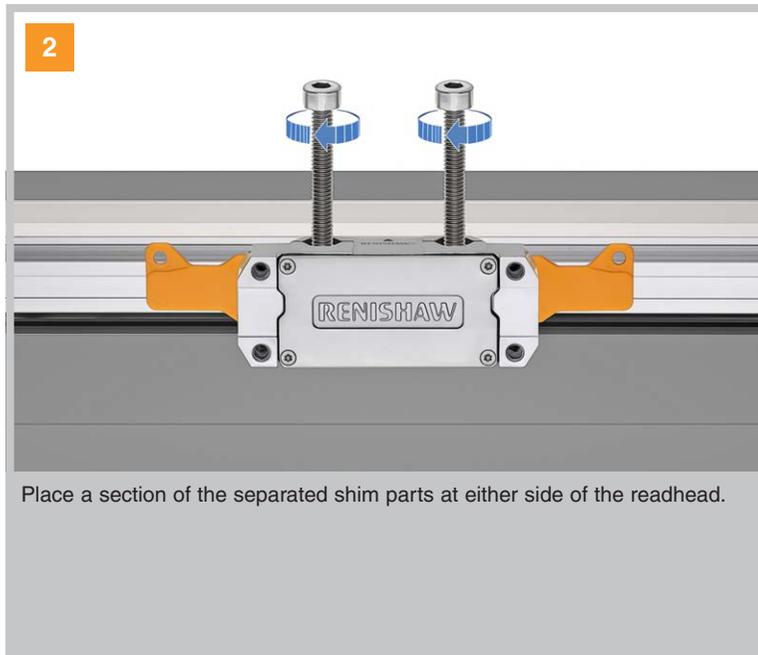
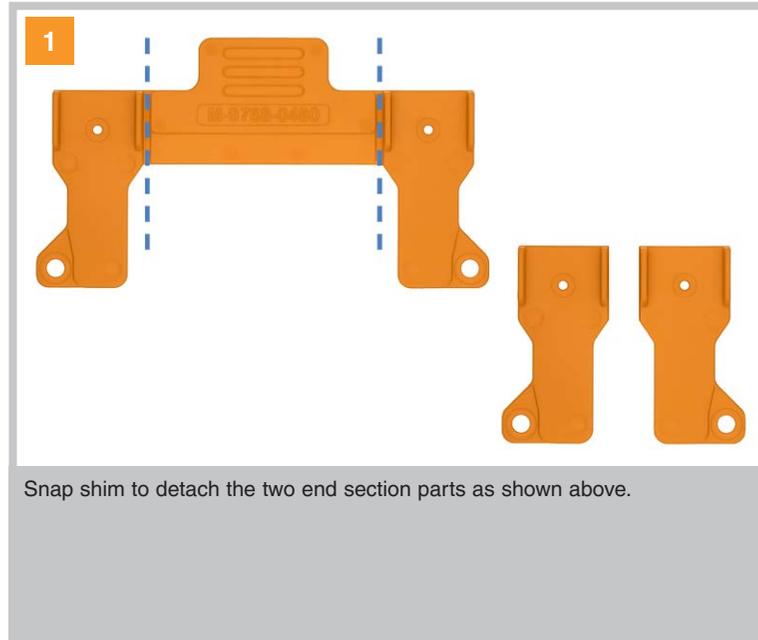



8.5 Installation using the mounting aid method

Remove alignment brackets prior to installation using the mounting aid.


When mounting a readhead to a machine slideway via an unconstrained bracket, an installation mounting aid can be used to accurately position, secure and fit the bracket to the slideway. The mounting aid clamps securely to the extrusion, allowing any machine slideway to be adjusted and secured horizontally in the correct location before readhead mounting.

37 mm mounting aid and 4 mm hex key required.

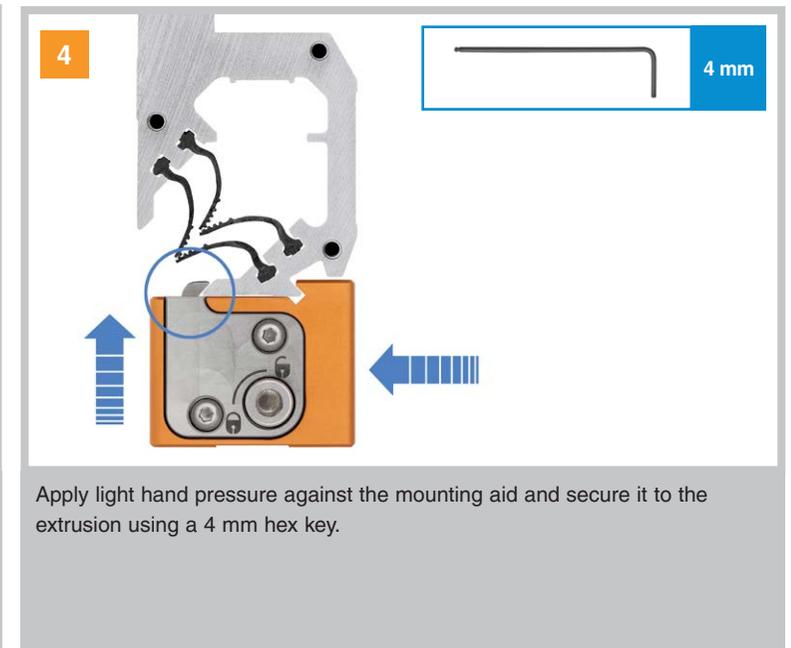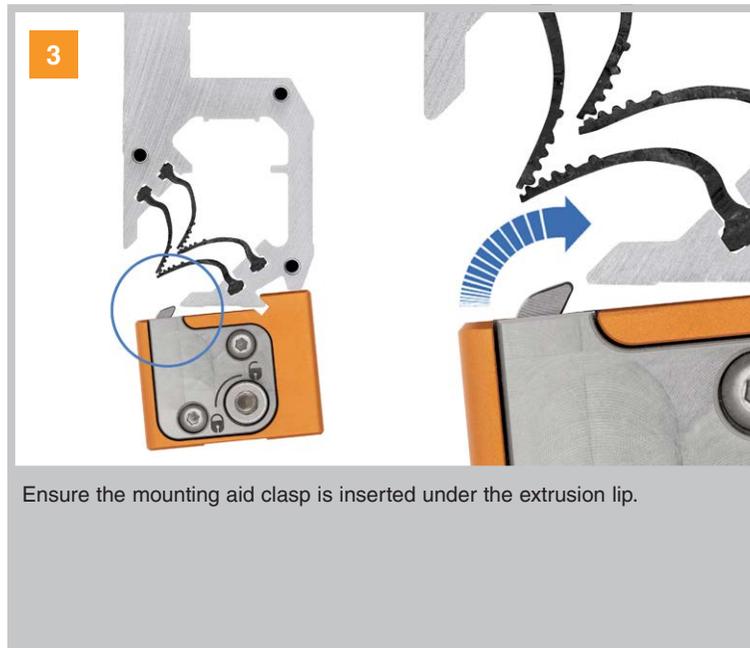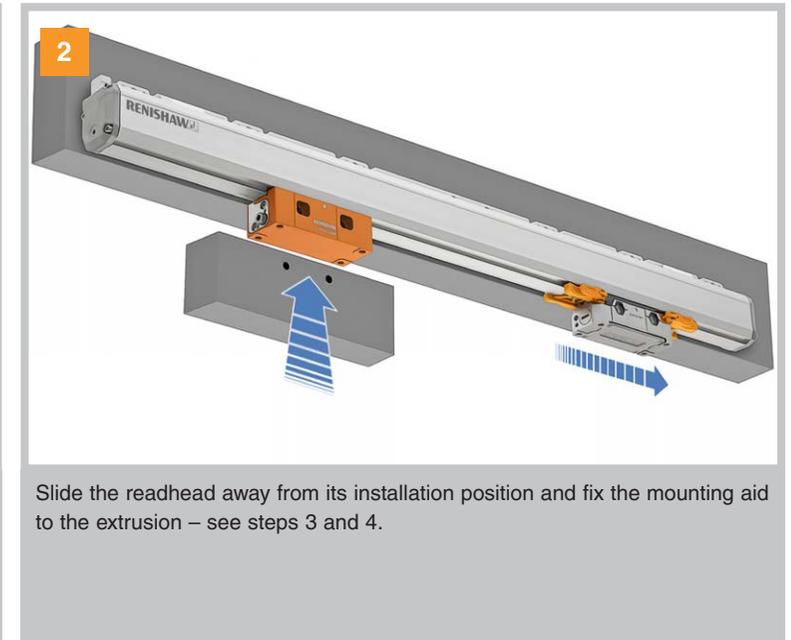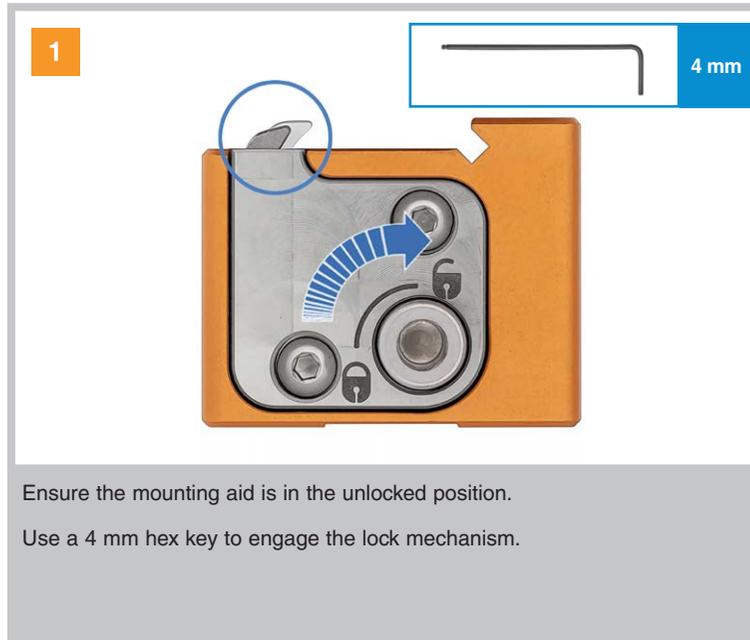


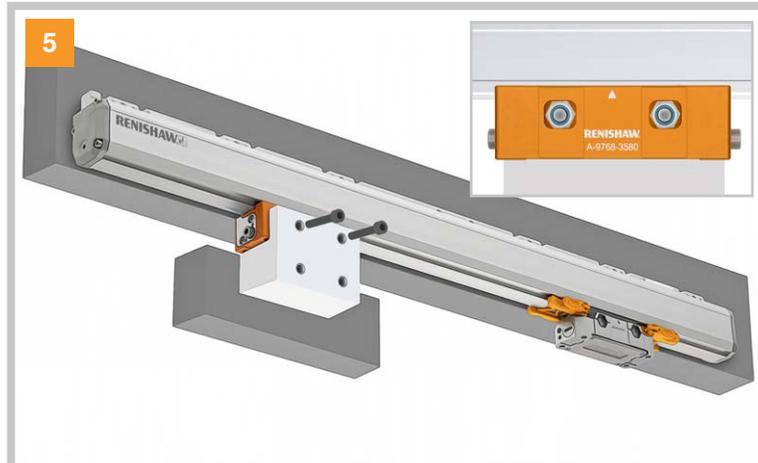


5
Align the readhead bracket with mounting aid and secure using screws and nuts.

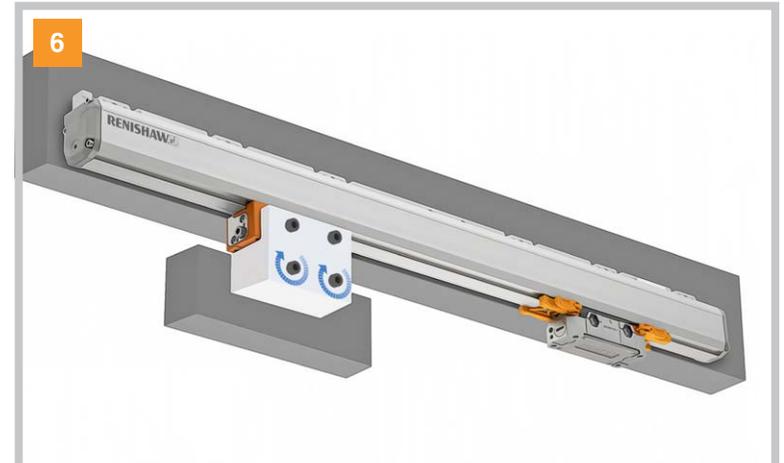

6
Align the axis slideway with the readhead bracket and secure using M6 screws.

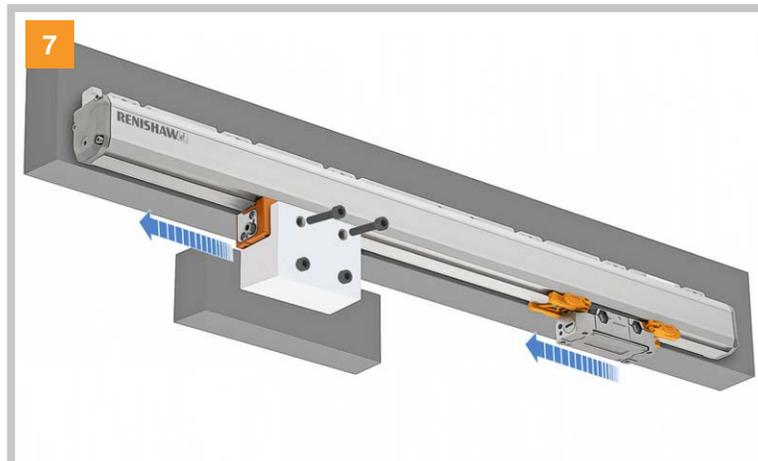

7
Remove screws and nuts from mounting aid, unlock and remove from extrusion.

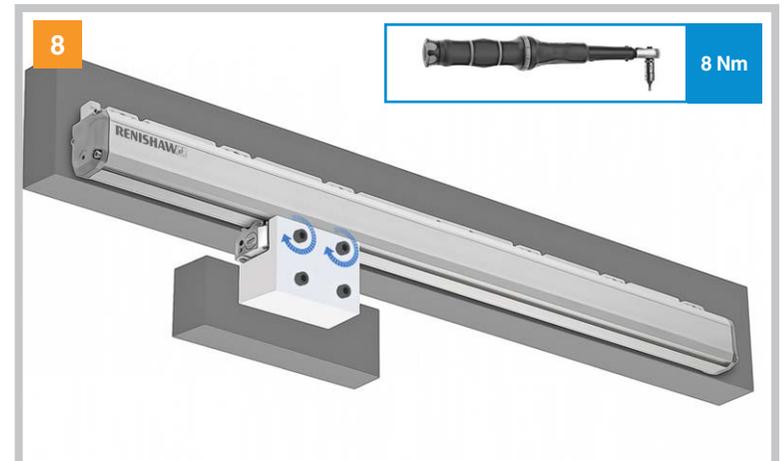

8
Align readhead with the readhead mounting bracket and secure with M6 screws and nuts.

Using the correct tool, tighten the screws to a torque of 8 Nm.

8.6 FORTiS cable connection

To assist with cable management the FORTiS-S system has two cable entry ports, allowing the cable to be inserted into either side of the readhead.

NOTE – STEP 4

Once the connector is engaged as shown, apply a further torque by hand on the knurled nut 'A' to ensure there is an adequate ground connection. The measured resistance of the ground connection (between the readhead body and the shield connection at the controller end of the cable assembly) must be less than 1 ohm.



1
Connector screw plug.

The cable connector port that is not being used should be fitted with the supplied screw plug.



2
2 × cable connector ports (one either side).



3
Insert the cable into the readhead. Take care to ensure correct connector orientation: the connector key edge should face towards to the base of the readhead.

When fully engaged, the cable connector grip ring should be 1 mm away from the readhead body, as illustrated above.

Using the knurled nut 'A', screw the connector into the threaded socket.



4
Using the included cable connection wrench with the hexagonal nut 'B', secure the encoder cable.


IMPORTANT: See 'Note – Step 4' in the text opposite.

8.7 Validating an installation

To validate the encoder installation the set-up LED provides instant verification of the encoder's signal strength and therefore its accurate alignment and installation.

The encoder requires power to enable the set-up LED; this can be via an appropriate cable plugged into the machine's controller. See [section 9 on page 21](#) for encoder power supply requirements.

NOTE: If the set-up LED is obscured then the signal strength can be obtained using the Advanced Diagnostic Tool for absolute encoders (ADTa-100).

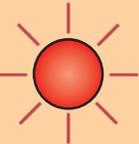LED status	Description	Required action
 BLUE	Signal level is optimal	No adjustment required
 GREEN	Signal level is good	No adjustment required
 ORANGE	Signal level is acceptable	Ensure the extrusion is parallel to the machine axis of motion (see section 5 on page 7) and adjust the readhead to maximise the signal strength along the full axis of travel to achieve a Green or Blue LED
 RED	Signal level is NOT acceptable	
 FLASHING RED	Unable to determine the position	Readhead not picking up the scale due to contamination or poor installation NOTE: Flashing LED indicates scale reading error. Flashing state is latched for some serial protocols. Remove power to reset.

8.8 Air filtration

FORTiS system encoders can be operated with an additional compressed air supply to increase the level of ingress protection from IP53 to IP64. If using air purge the air supply must meet pressure and cleanliness criteria as shown in the table below at the supply input of the encoder.


Air supply cleanliness requirements		
Air supply pressure	1 bar (pressure at encoder air inlet; air inlet connector has an integrated throttle that ensures the correct volume of airflow of 2 l/min through the encoder)	
Air quality	Particle size	No. of particles per m ³
	0.1 µm to 0.5 µm	≤ 20 000
	0.5 µm to 1.0 µm	≤ 400
	1.0 µm to 5.0 µm	≤ 10
Max pressure dew point	ISO 8573-1 Class 4 (pressure dew point at 3 °C)	
Total oil content	ISO 8573-1 Class 1 (max. oil concentration: 0.01 mg/m ³)	

It may be convenient to connect the air purge supply to the system part that will be fixed, i.e. depending on the machine configuration and axis movement, either the extrusion or the readhead may move with the machine slideway.

Air inlets are included on both sides of the readhead and on both the extrusion end caps. Use a suitable air supply hose with a 4 mm bore.

WARNING: Remove the blanking plug only from the position at which the purge air supply is to be connected, or the sealing integrity may be compromised.

Removal of the air supply bung and fitment of the air connection fitting into either the readhead (1) or extrusion end cap (2). Finger tighten (0.3 Nm maximum).

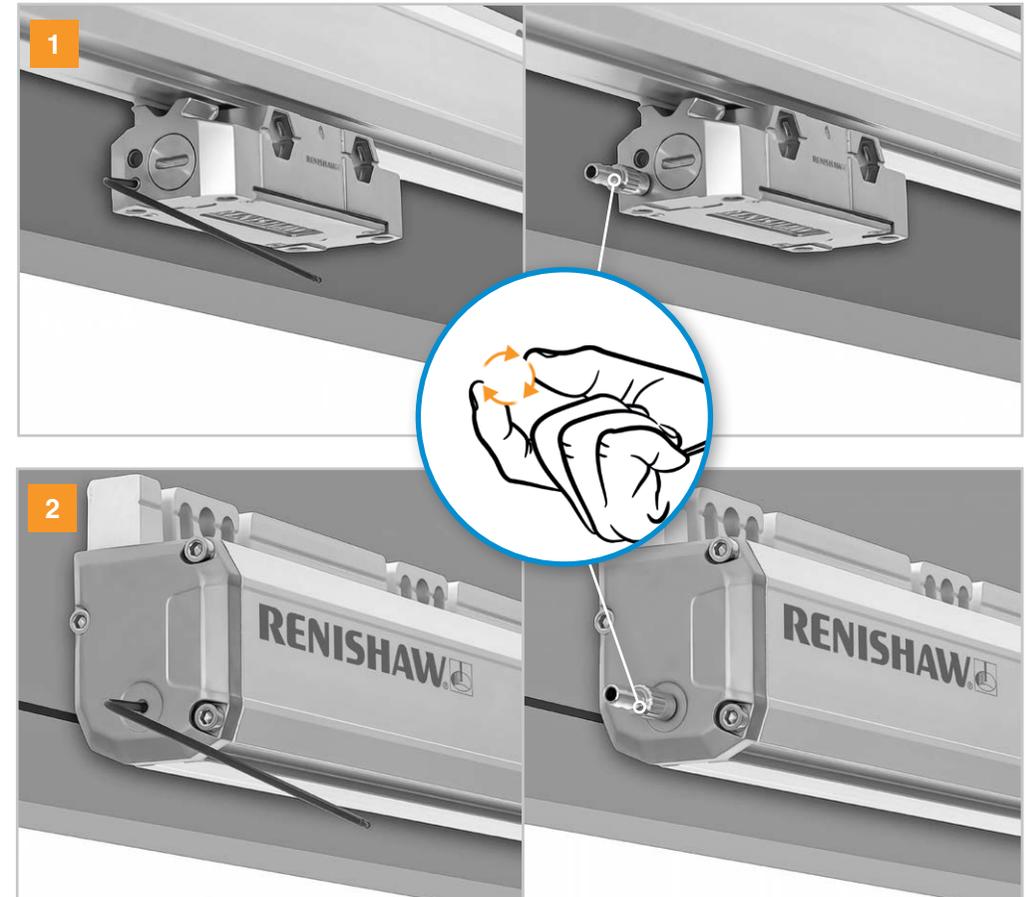

9 Electrical connections

9.1 Electrical preparation

It is necessary to power the FORTiS readhead to install the system correctly.

- Input voltage requirement at readhead carriage: 5 Vdc \pm 5%.
- Operating current: 250 mA.
- Operating power @ 5 V: 1.25 W.

System must be earthed as per the image opposite.


9.2 FORTiS grounding and shielding

NOTE: On Siemens DRIVE-CLiQ systems, the connector between the readhead cable and extension cable will mate via the A-9796-0575 interface.


IMPORTANT: The shield should be connected to the machine Earth (Field Ground).

IMPORTANT: If the flying lead variant is used or the connector is modified or replaced, the customer must ensure that both 0 V cores (White and Green) are connected to 0 V. In such situations, care should also be taken to ensure that 0 V and Earth remain properly insulated from each other throughout the cable run.


1) Standard arrangement

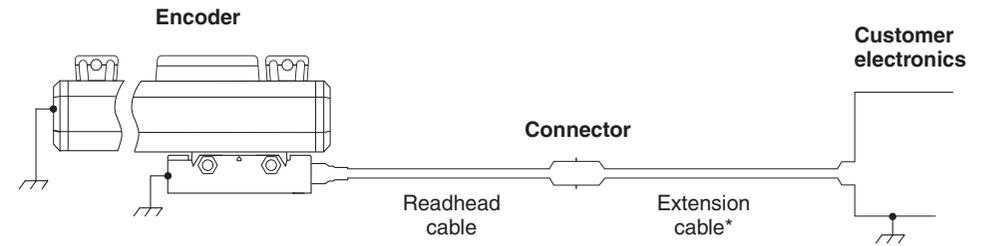

2) Arrangement for Siemens DRIVE-CLiQ versions

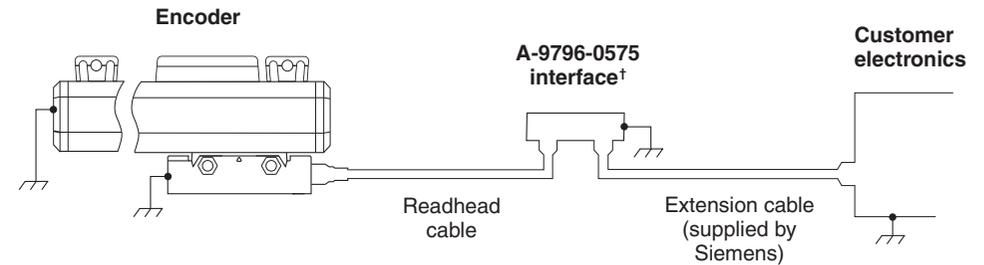

3) Arrangement when 20-way Honda connector (plastic body) is used with FANUC

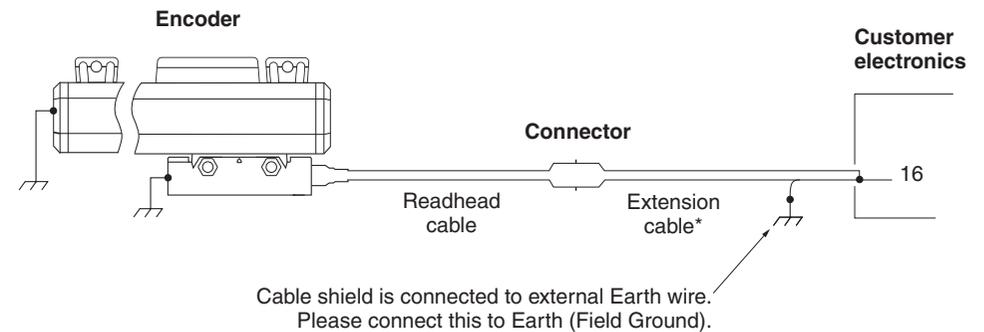

* For maximum extension cable length please consult your local Renishaw representative.

† See [page 26](#) for details.

10 Cables and protocols

10.1 General specifications

Readhead cable	Type A	Ø4.7 mm, 28 AWG, 7 core, single screen, black jacket Flex life > 20 × 10 ⁶ cycles at 20 mm bend radius Minimum static bend radius (internal radius): 15 mm
	Type B	OD: 6.3 mm, 23 AWG, 6 core (3 × twisted pairs), single screen, green jacket Flex life > 20 × 10 ⁶ cycles at 75 mm bend radius Minimum static bend radius (internal radius): 31.5 mm
	Type D	Armoured: OD 10 mm, 28 AWG, 7 core Flex life > 20 × 10 ⁶ cycles at 100 mm bend radius Minimum static bend radius (internal radius): 35 mm
	Extension cable (if applicable)	
	Type B	OD: 6.3 mm, 23 AWG, 6 core (3 × twisted pairs), single screen, green jacket Flex life > 20 × 10 ⁶ cycles at 75 mm bend radius
	Type C	OD: 7.8 mm, 20 AWG (power), 8 core (3 × twisted pairs + 2 power sense), single screen, green jacket Flex life > 20 × 10 ⁶ cycles at 75 mm bend radius Minimum static bend radius (internal radius): 58 mm

CAUTION: The FORTiS encoder system has been designed to the relevant EMC standards, but must be correctly integrated to achieve EMC compliance. In particular, attention to shielding arrangements is essential.

10.2 Permissible cable lengths

The tables below show permissible cable and extension cable combinations for the FORTiS range of enclosed linear encoders. For longer extension cable lengths, a shorter readhead cable is required. This information is valid for all communication protocols and connector types. At the worst case the minimum acceptable supply voltage is 4.75 Vdc.

Type B extension cables


			Extension cable length (m)						
			1	3	6	9	12	15	20
Readhead cable length (m)	Type A	0.5	✓	✓	✓	✓	✓	✓	✓
		1	✓	✓	✓	✓	✓	✓	✓
		3	✓	✓	✓	✓	✓	✓	✗
		6	✓	✓	✓	✓	✗	✗	✗
		9	✗	✗	✗	✗	✗	✗	✗
	Type B	0.5	✓	✓	✓	✓	✓	✓	✓
		1	✓	✓	✓	✓	✓	✓	✓
		3	✓	✓	✓	✓	✓	✓	✓
		6	✓	✓	✓	✓	✓	✓	✓
		9	✓	✓	✓	✓	✓	✓	✗
	Type D (armoured)	1	✓	✓	✓	✓	✓	✓	✓
		3	✓	✓	✓	✓	✓	✓	✗
6		✓	✓	✓	✓	✗	✗	✗	
9		✗	✗	✗	✗	✗	✗	✗	

Type C extension cables

		Max. extension cable length (m)	
Readhead cable length (m)	Type A	0.5	55
		1	51
		3	38
		6	20
		9	1
	Type B	0.5	56
		1	55
		3	51
		6	45
		9	39

10.3 BiSS C serial communications

9-way D-type

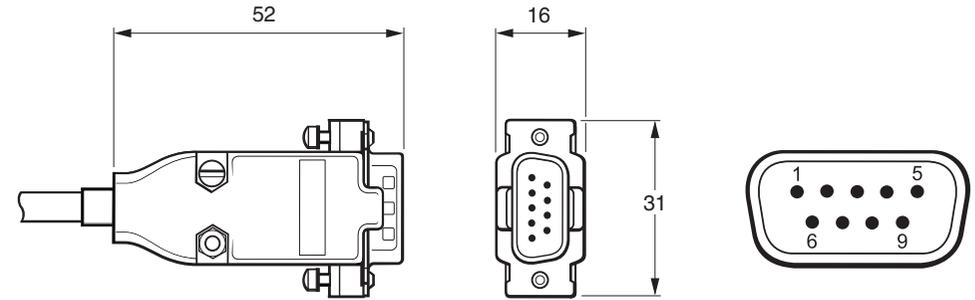


BiSS C (unidirectional) output signals

Function	Signal	Wire colour	Pin-out 9-way D
Power	5 V	Brown	4, 5
	0 V	White	8, 9
Serial communications	MA+	Violet	2
	MA-	Yellow	3
	SLO+	Grey	6
	SLO-	Pink	7
Shield	Shield	Cable braid	Case

10.4 FANUC serial communications

20-way plug

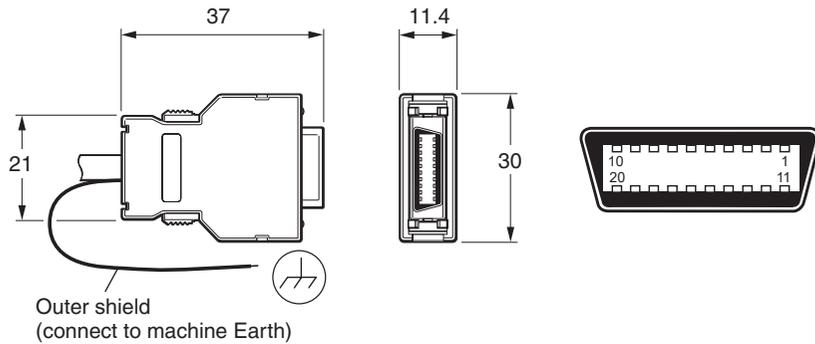


FANUC output signals

Function	Signal		Wire colour	Pin-out 20-way
	FANUC α	FANUC αi		
Power	5 V	5 V	Brown	9, 20
	0 V	0 V	White	12, 14
Serial communications	REQ+	REQ+ / SD+	Violet	5
	REQ-	REQ- / SD-	Yellow	6
	SD+	Do not connect	Grey	1
	SD-		Pink	2
Shield	Shield	Shield	Cable braid	16, External

Connecting the cable screen


! The following arrangement should be applied to FANUC versions only.

The cable is supplied with the shield connected to pin 16 inside the connector, making the required connection to the FANUC equipment. The Shield must also be connected to machine Earth, either by using the external Earth wire provided, or by cutting back the cable insulation to expose the shield and clamping that to machine Earth.

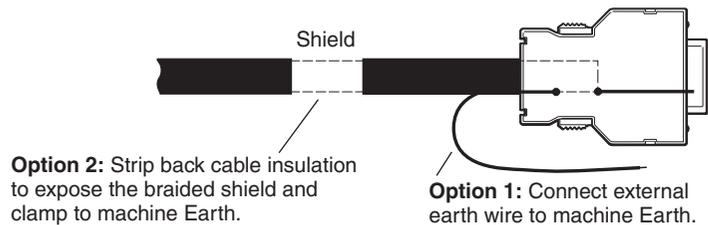


10.5 Panasonic serial communications

9-way D-type

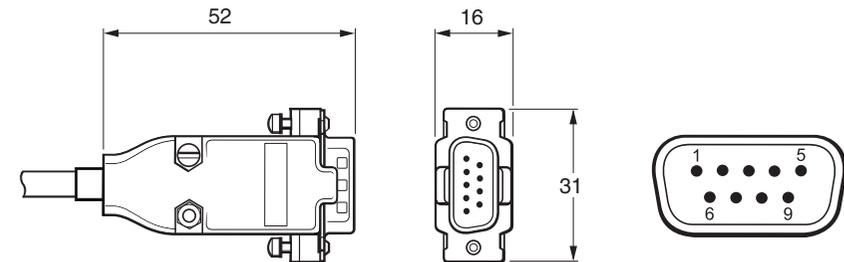

M12

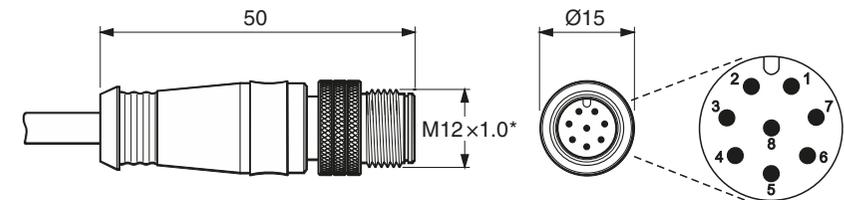

*The recommended tightening torque is 4 Nm.

Panasonic


Function	Signal	Wire colour	Pin-out 9-way D	Pin-out M12
Power	5 V	Brown	4, 5	2
	0 V	White	8, 9	5, 8
Serial communications	REQ+ / SD+	Violet	2	3
	REQ- / SD-	Yellow	3	4
Reserved	Do not connect	Grey	6	7
		Pink	7	6
Shield	Shield	Cable braid	Case	Case

10.6 Siemens DRIVE-CLiQ serial communications

Siemens DRIVE-CLiQ specifications

Power supply	24 V	1.8 W maximum (75 mA @ 24 V), 24 V as per DRIVE-CLiQ specification. 24 V power is provided by the DRIVE-CLiQ network NOTE: The Renishaw DRIVE-CLiQ interface must be powered from a 24 Vdc supply complying with the requirements for SELV of standard IEC 60950-1
	Ripple	200 mVpp maximum @ frequency up to 500 kHz
Maximum total cable length	Readhead to DRIVE-CLiQ interface 9 m (Refer to Siemens DRIVE-CLiQ specifications for maximum cable length from interface to controller) Extension cables from the FORTiS DRIVE-CLiQ interface to controller should be sourced directly from Siemens	
Connector tightening torque	M12 – 4 Nm	

M12

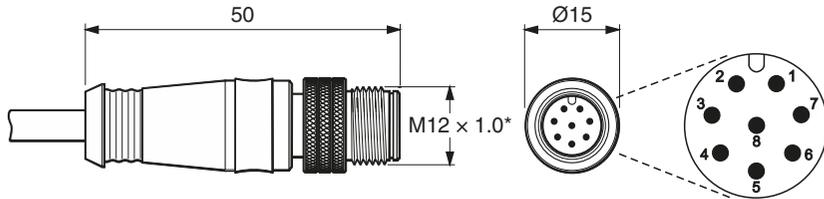

*The recommended tightening torque is 4 Nm.

Siemens DRIVE-CLiQ signals between readhead and interface

Function	Signal	Wire colour	Pin-out M12
Power	5 V	Brown	2
	0 V	White	5, 8
Serial communications	A+	Violet	3
	A-	Yellow	4
Reserved	Do not connect	Grey	7
		Pink	6
Shield	Shield	Cable braid	Case

10.7 Siemens DRIVE-CLiQ interface

RDY LED functions

Colour	Status	Description
-	Off	Power supply is missing or outside permissible tolerance range
Green	Continuous light	The component is ready for operation and cyclic DRIVE-CLiQ communication is taking place
Orange	Continuous light	DRIVE-CLiQ communication is being established
Red	Continuous light	At least one fault is present in this component NOTE: The LED is activated regardless of whether the corresponding messages have been reconfigured
Green/Orange or Red/Orange	Flashing light	Component recognition via LED is activated (p0144) NOTE: Both options depend on the LED status when component recognition is activated via p0144=1

Status LED function

STATUS displays the readhead set-up status as shown on the readhead set-up LED; see [section 8.7 on page 19](#) for more details.

Siemens DRIVE-CLiQ interface output



Function	Signal	Pin-out M12
Power	24 V	1
	0 V	5
DRIVE-CLiQ communications	RX+	3
	RX-	4
	TX+	7
	TX-	6
Shield	Shield	Case

Siemens DRIVE-CLiQ interface installation drawing

Single readhead (A-9796-0575)



Dimensions in mm

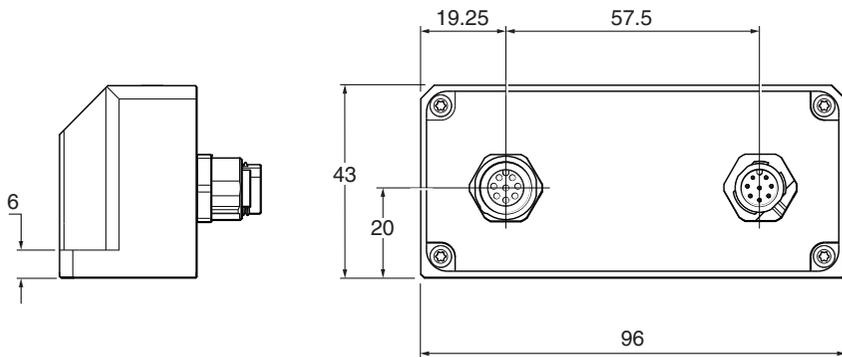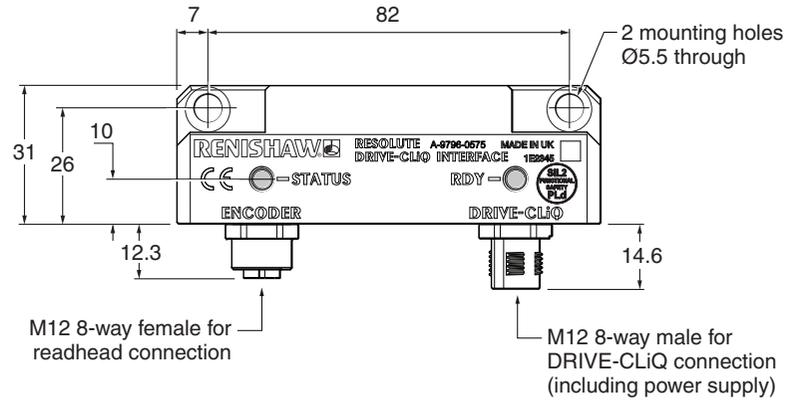

Renishaw plc
New Mills, Wotton-under-Edge
Gloucestershire, GL12 8JR
United Kingdom

T +44 (0) 1453 524524
F +44 (0) 1453 524901
E uk@renishaw.com
www.renishaw.com

RENISHAW 
apply innovation™

For worldwide contact details, visit www.renishaw.com/contact

Renishaw plc. Registered in England and Wales. Company no: 1106260.
Registered office: New Mills, Wotton-under-Edge, Gloucestershire, GL12 8JR, UK.



M - 9768 - 9857 - 02

Part no.: M-9768-9857-02-B
Issued: 01.2021